

# Manual THG

# Lubrication instructions

Please read following instructions carefully when lubricating:

- Lubricate in the areas indicated: Slide bearings, pinion and gear rack
- Lubricants: De Gier THG grease P.SME.THG5000 | 0,339 g/cm | THG30 0,18 gr/cm
- Maintenance interval: **every half year**

